

# ASR161

## UNDER BENCH REFRIGERATOR OPERATION OF THE TEMPERATURE CONTROLLER



**1、 TEMPERATURE ADJUSTER:** PRESS BUTTON “SET” WITH SHINING, THEN PRESS THE BUTTONS “▲” OR “▼” TO CHANGE THE TEMPERATURE. PRESS BUTTON “▲” OR “▼” OVER 2 SECONDS, THE TEMPERATURE CAN BE INCREASED OR DECREASED CONTINUOUSLY. DOES NOT TOUCH ANY BUTTONS OVER 6 SECONDS, THE TEMPERATURE CONTROLLER WILL DISPLAY THE REAL INSIDE TEMPERATURE OF THE CABINET.

(CONTROL OF THE TEMPERATURE RANGE: PARAMETER E1~E2)

**2、 DEFROST/ UNDEFROST:** PRESS BUTTON “DEFROST” OVER 6 SECONDS, YOU CAN DEROST OR STOP DEFROST. WHEN IT IS DEFROSTING, THE LIGHT IS SHINING.

**3、 COOLING INDICATION LIGHT:** DURING COOLING, THE LIGHT OF THE COOLING INDICATION IS BRIGHT; DURING THE NORMAL TEMPERATURE, THE LIGHT OF THE COOLING INDICATION IS UNBRIGHT; DURING DELAY COOLING, THE LIGHT OF THE COOLING INDICATION IS GLINTING.

**4、 PARAMETER SET:**

PRESS BUTTON “SET” OVER 6 SECONDS, YOU CAN ADJUST THE PARAMETERS, AT THE SAME TIME, THE DIGITAL SCREEN WILL DISPLAY GLINTING “E1”, PRESS THE BUTTON “SET” AGAIN THE E2、 E3、 E4、 E5、 F1、 F2、 C1、 E1 WILL BE SHOWED IN TURN.

AFTER THAT, PRESS THE BUTTON “▲” OR “▼” TO ADJUST AND SET THE PARAMETERS

DOES NOT TOUCH ANY BUTTONS OVER 6 SECONDS, THE CONTROLLER WILL RECOVER AS USUAL.

PARAMETER	FUNCTION	ADJUSTMENT RANGE	FACTORY SET
E1	LOWEST TEMPERATURE	-45°C/-45°F	-20°C/-4°F
E2	HIGHEST TEMPERATURE	45°C/113°F	20°C/68°F
E3	RANGE BETWEEN LOWEST AND HIGHEST TEMPERATURE	1~10°C/1~18°F	4°C/7°F
E4	START DELAY	0~10 MINUTES	2 MINUTES
E5	TEMPERATUR SENSOR REVISE	-20~20°C/-36~36°F	0
F1	DEFROST TIME	1~60 MINUTES	20 MINUTES
F2	DEFROST CYCLE	0~24 HOURS	6 HOURS
C1	TEMPERATURE UNIT	C=CELSIUR F=FAHRENHEIT	C

5、RETURN TO FACTORY SET: PRESS BUTTON“▲” TWO TIMES CONTINUOUSLY, THEN PRESS “▼” SIX SECONDS, THE DIGITAL SCREEN WILL BE GLINTING, AT THE MOMENT, THE FACTORY SET IS RETURNED. AND SIX SECONDS LATER, REFRIGERATOR WILL COME TO NORMAL WORK。