



# Thermostat Manual

 
- 1、 Up drawer is chiller, Down is freezer.
- 2、 How to change freezer to chiller:

Press the button“R/F” 3 seconds until “” display ,

2 seconds later the “” message will be displayed.

- 3、 How to change chiller to freezer:

Press the button“R/F” 3 seconds until “” display ,

2 seconds later the “” message will be displayed.