

Digital controller with defrost and fans management

XR60C – XR60D

CONTENTS

- 1. GENERAL WARNING \_\_\_\_\_ 1
- 2. GENERAL DESCRIPTION \_\_\_\_\_ 1
- 3. CONTROLLING LOADS \_\_\_\_\_ 1
- 4. FRONT PANEL COMMANDS \_\_\_\_\_ 1
- 5. TEMPERATURE ALARM AND ITS DURATION RECORDING (HACCP) \_\_\_\_\_ 1
- 6. MAIN FUNCTIONS \_\_\_\_\_ 2
- 7. PARAMETERS \_\_\_\_\_ 2
- 8. DIGITAL INPUT \_\_\_\_\_ 3
- 9. INSTALLATION AND MOUNTING \_\_\_\_\_ 3
- 10. ELECTRICAL CONNECTIONS \_\_\_\_\_ 3
- 11. HOW TO USE THE HOT KEY \_\_\_\_\_ 3
- 12. ALARM SIGNALS \_\_\_\_\_ 3
- 13. TECHNICAL DATA \_\_\_\_\_ 3
- 14. CONNECTIONS \_\_\_\_\_ 4
- 15. DEFAULT SETTING VALUES \_\_\_\_\_ 4

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

1.2 SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.p.A." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.


2. GENERAL DESCRIPTION

Models XR60C, format 32 x 74 mm, and XR60D, DIN rail format, are microprocessor based controller, suitable for applications on medium or low temperature ventilated refrigerating units. They have three relay outputs to control compressor, fan, and defrost, which can be either electrical or reverse cycle (hot gas). It is also provided with two NTC or PTC probe inputs, one for temperature control, the other, to be located onto the evaporator, to control the defrost termination temperature and to managed the fan. The instrument is fully configurable through special parameters that can be easily programmed through the keyboard.

3. CONTROLLING LOADS

3.1 COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.

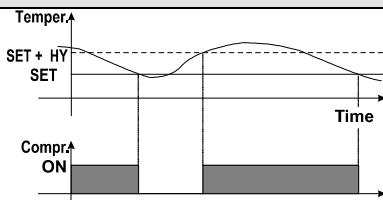

In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters "CO<sub>n</sub>" and "CO<sub>F</sub>".

3.2 DEFROST

Two defrost modes are available through the "tdF" parameter: defrost through electrical heater (tdF = EL) and hot gas defrost (tdF = in). Other parameters are used to control the interval between defrost cycles (ldF), its maximum length (MdF) and two defrost modes: timed or controlled by the evaporator's probe (P2P). At the end of defrost dripping time is started, its length is set in the FSt parameter. With FSt =0 the dripping time is disabled.

3.3 CONTROL OF EVAPORATOR FANS

The fan control mode is selected by means of the "FnC" parameter:  
**FnC = C\_n**: fans will switch ON and OFF with the compressor and run during defrost;  
**FnC = o\_n**: fans will run even if the compressor is off, and not run during defrost;  
 After defrost, there is a timed fan delay allowing for drip time, set by means of the "Fnd" parameter.

**FnC = C\_Y** fans will switch ON and OFF with the compressor and run during defrost;  
**FnC = o\_Y** fans will run continuously also during defrost

An additional parameter "FSt" provides the setting of temperature, detected by the evaporator probe, above which the fans are always OFF. This is used to make sure circulation of air only if his temperature is lower than set in "FSt".

3.3.1 Forced activation of fans

This function managed by the Fct parameter is designed to avoid short cycles of fans, that could happen when the controller is switched on or after a defrost, when the room air warms the evaporator. **Functioning**: if the difference of temperature between the evaporator and the room probes is more than the value of the Fct parameter, the fans are switched on. With Fct=0 the function is disabled.

4. FRONT PANEL COMMANDS



**SET**: To display target set point; in programming mode it selects a parameter or confirm an operation.

- ❄️ (DEF) To start a manual defrost
- ▲ (UP): To see the last temperature alarm happened; in programming mode it browses the parameter codes or increases the displayed value.
- ▼ (DOWN) To see the last temperature alarm happened; in programming mode it browses the parameter codes or decreases the displayed value.

KEY COMBINATIONS:

- ▲ + ▼ To lock & unlock the keyboard.
- SET + ▼ To enter in programming mode.
- SET + ▲ To return to the room temperature display.

4.1 USE OF LEDS


Each LED function is described in the following table.

| LED | MODE     | FUNCTION  |
|-----|----------|---|
| ❄️  | ON       | Compressor enabled  |
| ❄️  | Flashing | -Programming Phase (flashing with ❄️)<br>- Anti-short cycle delay enabled |
| ❄️  | ON       | Defrost enabled   |
| ❄️  | Flashing | - Programming Phase (flashing with ❄️)<br>- Drip time in progress         |
| 🌀   | ON       | Fans enabled  |
| 🌀   | Flashing | Fans delay after defrost in progress.                                     |
| 🔊   | ON       | An temperature alarm happened   |

5. TEMPERATURE ALARM AND ITS DURATION RECORDING (HACCP)

XR60C signals and records temperature alarms, together with their duration and max value reached. See drawing:

Ex. High temperature alarm

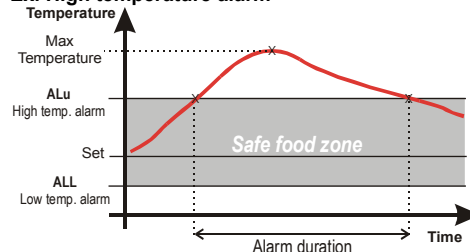

5.1 HOW TO SEE THE ALARM DURATION AND MAX (MIN) TEMPERATURE

If the alarm LED is on, an alarm has taken place. To see the kind of alarm, the max (min) reached temperature and alarm duration do as follows:

1. Push the Up or Down key.
2. On the display the following message is shown: "HAL" for high temperature alarm ("LAL" for the minimum alarm), followed by the **Maximum (minimum) temperature**, then the "tim" (tiMe) message is displayed, followed by the "Duration" in h.mm.
3. Then the instrument displays the temperature once again.


**NOTE1**: if an alarm is still occurring the "tim" shows the partial duration.  
**NOTE2**: the alarm is recorded when the temperature come back to normal values

## 5.2 HOW TO RESET A RECORDED ALARM OR ONE THAT IS STILL OCCURRING

1. Hold the SET key pressed for more than 3s, while the recorded alarm is displayed. (the rSt message will be displayed)
2. To confirm the operation, the "rSt" message starts blinking and the normal temperature will be displayed.

## 6. MAIN FUNCTIONS


### 6.1 HOW TO SEE THE SETPOINT

- 
1. Push and immediately release the SET key: the display will show the Set point value;
  2. Push and immediately release the SET key or wait for 5 seconds to display the probe value again.

### 6.2 HOW TO CHANGE THE SETPOINT



1. Push the SET key for more than 2 seconds to change the Set point value;
2. The value of the set point will be displayed and the \* LED starts blinking;
3. To change the Set value push the ▲ or ▼ arrows within 10s.
4. To memorise the new set point value push the SET key again or wait 10s.

### 6.3 HOW TO START A MANUAL DEFROST

- 
1. Push the DEF key for more than 2 seconds and a manual defrost will start.

### 6.4 HOW TO CHANGE A PARAMETER VALUE

To change the parameter's value operate as follows:

- 
- 
1. Enter the Programming mode by pressing the Set and DOWN key for 3s (\* and \* start blinking).
  2. Select the required parameter.
  3. Press the "SET" key to display its value (now only the \* LED is blinking).
  4. Use "UP" or "DOWN" to change its value.
  5. Press "SET" to store the new value and move to the following parameter.



To exit: Press SET + UP or wait 15s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

### 6.5 THE HIDDEN MENU

The hidden menu includes all the parameters of the instrument.

#### 6.5.1 HOW TO ENTER THE HIDDEN MENU

- 
- 
1. Enter the Programming mode by pressing the Set + ▼ key for 3s (LED 1 and \* start blinking).
  2. When a parameter is displayed keep pressed the Set+▼ for more than 7s. The Pr2 label will be displayed immediately followed from the HY parameter. **NOW YOU ARE IN THE HIDDEN MENU.**
  3. Select the required parameter.
  4. Press the "SET" key to display its value (Now only the \* LED is blinking).
  5. Use ▲ or ▼ to change its value.
  6. Press "SET" to store the new value and move to the following parameter.

To exit: Press SET + ▲ or wait 15s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

#### 6.5.2 HOW TO MOVE A PARAMETER FROM THE HIDDEN MENU TO THE FIRST LEVEL AND VICEVERSA.

Each parameter present in the HIDDEN MENU can be removed or put into "THE FIRST LEVEL" (user level) by pressing "SET + ▼".

In HIDDEN MENU when a parameter is present in First Level the decimal point is on.

### 6.6 HOW TO LOCK THE KEYBOARD




1. Keep pressed for more than 3 s the UP and DOWN keys.
2. The "POF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX or Min temperature stored
3. If a key is pressed more than 3s the "POF" message will be displayed.

### 6.7 TO UNLOCK THE KEYBOARD

Keep pressed together for more than 3s the ▲ and ▼ keys, till the "Pon" message will be displayed.

### 6.8 THE CONTINUOUS CYCLE

- 
1. When defrost is not in progress, it can be activated by holding the "▲" key pressed for about 3 seconds.

The compressor operates in continuous mode for the time set through the "CCt" parameter. The cycle can be terminated before the end of the set time using the same activation key "▲" for 3 seconds.

## 7. PARAMETERS

NOTE: the parameters preceded by dots are in the Hidden Menu.

### REGULATION

**Hy Differential:** (0,1 ÷ 25,5°C / 1÷255 °F) Intervention differential for set point. Compressor Cut IN is Set Point Plus Differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.

- **LS Minimum set point:** (-50°C÷SET/-58°F÷SET): Sets the minimum acceptable value for the set point.
- **US Maximum set point:** (SET÷110°C/ SET÷230°F). Set the maximum acceptable value for set point.

**Ot Thermostat probe calibration:** (-12.0÷12.0°C; -120÷120°F) allows to adjust possible offset of the thermostat probe.

**P2P Evaporator probe presence:** n= not present: the defrost stops by time; y= present: the defrost stops by temperature.

• **OE Evaporator probe calibration:** (-12.0÷12.0°C; -120÷120°F). allows to adjust possible offset of the evaporator probe.

• **OdS Outputs activation delay at start up:** (0÷255min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.

**AC Anti-short cycle delay:** (0÷50 min) minimum interval between the compressor stop and the following restart.

- **CCt Compressor ON time during continuous cycle:** (0.0÷24.0h; res. 10min) Allows to set the length of the continuous cycle: compressor stays on without interruption for the CCt time. Can be used, for instance, when the room is filled with new products.
- **CO n Compressor ON time with faulty probe:** (0÷255 min) time during which the compressor is active in case of faulty thermostat probe. With CO n=0 compressor is always OFF.
- **COF Compressor OFF time with faulty probe:** (0÷255 min) time during which the compressor is OFF in case of faulty thermostat probe. With COF=0 compressor is always active.

### DISPLAY

- **CF Temperature measurement unit:** °C=Celsius; °F=Fahrenheit. **WARNING:** When the measurement unit is changed the SET point and the values of the parameters Hy, LS, US, Ot, ALU and ALL have to be checked and modified if necessary).

**rES Resolution (for °C):** (in = 1°C; dE = 0.1 °C) allows decimal point display.

- **Lod Display :** select which probe is displayed by the instrument: **P1** = Thermostat probe; **P2** = Evaporator probe

### DEFROST

**tdF Defrost type:** EL = electrical heater; in = hot gas

**dtE Defrost termination temperature:** (-50÷50 °C/ -58÷122°F) (Enabled only when EdF=Pb) sets the temperature measured by the evaporator probe, which causes the end of defrost.

**ldF Interval between defrost cycles:** (0÷120h) Determines the time interval between the beginning of two defrost cycles.

**MdF (Maximum) length for defrost:** (0÷255min) When **P2P = n**, (not evaporator probe: timed defrost) it sets the defrost duration, when **P2P = y** (defrost end based on temperature) it sets the maximum length for defrost.

- **dSd Start defrost delay:** (0÷99min) This is useful when different defrost start times are necessary to avoid overloading the plant.
- **dFd Temperature displayed during defrost:** (rt = real temperature; it = temperature at defrost start; SEt = set point; dEF = "dEF" label)
- **dAd MAX display delay after defrost:** (0÷255min). Sets the maximum time between the end of defrost and the restarting of the real room temperature display.
- **Fdt Drip time:** (0÷120 min) time interval between reaching defrost termination temperature and the restoring of the control's normal operation. This time allows the evaporator to eliminate water drops that might have formed due to defrost.
- **dPo First defrost after start-up:** (y = immediately; n = after the ldF time)
- **dAF Defrost delay after continuous cycle:** (0÷23.5h) time interval between the end of the fast freezing cycle and the following defrost related to it.

### FANS

**FnC Fans operating mode:** C-n= runs with the compressor, OFF during defrost;

o-n = continuous mode, OFF during defrost;

C-Y = runs with the compressor, ON during defrost;

o-Y = continuous mode, ON during defrost;

**Fnd Fans delay after defrost:** (0÷255min) Time interval between end of defrost and evaporator fans start.

**Fct Temperature differential avoiding short cycles of fans** (0÷59°C; Fct=0 function disabled). If the difference of temperature between the evaporator and the room probes is more than the value of the Fct parameter, the fans are switched on.

**FSt Fans stop temperature:** (-50÷50°C/122°F) setting of temperature, detected by evaporator probe, above which fans are always OFF.

### ALARMS

- **ALC Temperature alarms configuration:** (Ab; rE)  
Ab= absolute temperature: alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the "SET+ALU" or "SET-ALL" values.
- **ALU MAXIMUM temperature alarm:** (SET÷110°C; SET÷230°F) when this temperature is reached the alarm is enabled, after the "ALD" delay time.
- **ALL Minimum temperature alarm:** (-50.0 ÷ SET°C; -58÷230°F when this temperature is reached the alarm is enabled, after the "ALD" delay time.
- **ALd Temperature alarm delay:** (0÷255 min) time interval between the detection of an alarm condition and alarm signalling.

- **dao Exclusion of temperature alarm at startup:** (from 0.0 min to 23.5h) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.

**DIGITAL INPUT**

- i1P Digital input polarity:** **oP:** the digital input is activated by opening the contact; **CL:** the digital input is activated by closing the contact.
- i1F Digital input configuration:** **EAL** = external alarm: "EA" message is displayed; **bAL** = serious alarm "CA" message is displayed. **PAL** = pressure switch alarm, "CA" message is displayed; **dor** = door switch function; **dEF** = activation of a defrost cycle; **LHt** =not enabled; **Htr** = kind of action inversion (cooling – heating).
- did:** (0÷255 min) **with i1F= EAL or i1F = bAL digital input alarm delay:** delay between the detection of the external alarm condition and its signalling.  
**with i1F= dor: door open signalling delay**  
**with i1F = PAL: time for pressure switch function:** time interval to calculate the number of the pressure switch activation.
- nPS Pressure switch number:** (0 ÷15) Number of activation of the pressure switch, during the "did" interval, before signalling the alarm event (i2F= PAL).  
**If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.**
- **odc Compressor and fan status when open door:** **no** = normal; **Fan** = Fan OFF; **CPr** = Compressor OFF; **F\_C** = Compressor and fan OFF.

**OTHER**

- PbC Type of probe:** it allows to set the kind of probe used by the instrument: **PbC** = PBC probe, **ntC** = NTC probe.
- **dp1 First probe display**
- **dp2 Second probe display**
- **rEL Software release for internal use.**
- **Ptb Parameter table code: readable only.**

**8. DIGITAL INPUT**

The free contact digital input is programmable in five different configurations by the "i1F" parameter.

**8.1 DOOR SWITCH INPUT (i1F = dor)**

It signals the door status and the corresponding relay output status through the "odc" parameter: **no** = normal (any change); **Fan** = Fan OFF;

**CPr** = Compressor OFF; **F\_C** = Compressor and fan OFF.  
 Since the door is opened, after the delay time set through parameter "did", the door alarm is enabled, the display shows the message "dA" and the regulation restarts. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

**8.2 GENERIC ALARM (i1F = EAL)**

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is de-activated.

**8.3 SERIOUS ALARM MODE (i1F = bAL)**

When the digital input is activated, the unit will wait for "did" delay before signalling the "CA" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

**8.4 PRESSURE SWITCH (i1F = PAL)**

If during the interval time set by "did" parameter, the pressure switch has reached the number of activation of the "nPS" parameter, the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF.

**If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.**

**8.5 START DEFROST (i1F = dFr)**

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "MdF" safety time is expired.

**8.6 INVERSION OF THE KIND OF ACTION: HEATING-COOLING (i1F = Htr)**


This function allows to invert the regulation of the controller: from cooling to heating and viceversa.

**8.7 DIGITAL INPUTS POLARITY**

The digital input polarity depends on the "i1P" parameter.  
**i1P=CL:** the input is activated by closing the contact.  
**i1P=OP:** the input is activated by opening the contact

**9. INSTALLATION AND MOUNTING**

Instrument **XR60C** shall be mounted on vertical panel, in a 29x71 mm hole, and fixed using the special bracket supplied.  
 To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-C) as shown in figure.  
 Instrument **XR60D** shall be mounted on an omega DIN rail.

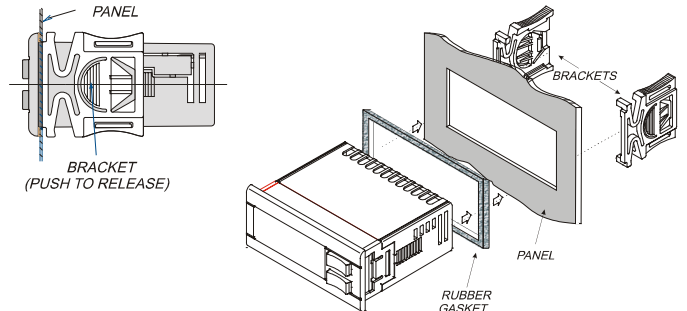

The temperature range allowed for correct operation is 0÷60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let air circulate by the cooling holes.

**10. ELECTRICAL CONNECTIONS**

The instrument is provided with screw terminal block to connect cables with a cross section up to 2,5 mm². Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

**10.1 PROBE CONNECTION**

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

**11. HOW TO USE THE HOT KEY**

**11.1 HOW TO PROGRAM A HOT KEY FROM THE INSTRUMENT (UPLOAD)**

1. Program one controller with the front keypad.
2. When the controller is ON, insert the "Hot key" and push  $\blacktriangle$  key; the "uPL" message appears followed a by flashing "End"
3. Push "SET" key and the End will stop flashing.
4. Turn OFF the instrument remove the "Hot Key", then turn it ON again.

**NOTE:** the "Err" message is displayed for failed programming. In this case push again  $\blacktriangle$  key if you want to restart the upload again or remove the "Hot key" to abort the operation.

**11.2 HOW TO PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)**

1. Turn OFF the instrument.
2. Insert a programmed "Hot Key" into the 5 PIN receptacle and then turn the Controller ON.
3. Automatically the parameter list of the "Hot Key" is downloaded into the Controller memory, the "dOL" message is blinking followed a by flashing "End".
4. After 10 seconds the instrument will restart working with the new parameters.
5. Remove the "Hot Key"..

**NOTE** the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation.

**12. ALARM SIGNALS**

| Message | Cause                            | Outputs   |
|---------|----------------------------------|---|
| "P1"    | Room probe failure               | Compressor output according to par. "Con" and "COF" |
| "P2"    | Evaporator probe failure         | Defrost end is timed                                |
| "HA"    | Maximum temperature alarm        | Outputs unchanged.                                  |
| "LA"    | Minimum temperature alarm        | Outputs unchanged.                                  |
| "dA"    | Door open                        | Compressor and fans restarts                        |
| "EA"    | External alarm                   | Output unchanged.                                   |
| "CA"    | Serious external alarm (i1F=bAL) | All outputs OFF.                                    |
| "CA"    | Pressure switch alarm (i1F=PAL)  | All outputs OFF                                     |

**12.1 ALARM RECOVERY**

Probe alarms "P1" and "P2" start some seconds after the fault in the related probe; they automatically stop some seconds after the probe restarts normal operation. Check connections before replacing the probe.  
 Temperature alarms "HA" and "LA" automatically stop as soon as the thermostat temperature returns to normal values and when defrost starts.  
 Alarms "EA" and "CA" (with i1F=bAL) recover as soon as the digital input is disabled.  
 Alarm "CA" (with i1F=PAL) recovers only by switching off and on the instrument.




13. TECHNICAL DATA

**Housing:** self extinguishing ABS.  
**Case:** XR60C frontal 32x74 mm; depth 60mm;  
 XR60D 4 DIN modules 70x85 mm; depth 61mm  
**Mounting:** XR60C panel mounting in a 71x29mm panel cut-out  
 XR60D DIN RAIL mounted in a omega (3) din rail  
**Protection:** IP20; **Frontal protection:** XR60C IP65 with frontal gasket RG-C (optional).  
**Connections:** Screw terminal block  $\leq 2,5 \text{ mm}^2$  wiring.  
**Power supply:** according to the model: 12Vac/dc,  $\pm 10\%$ ; 24Vac/dc,  $\pm 10\%$ ; 230Vac  $\pm 10\%$ , 50/60Hz, 110Vac  $\pm 10\%$ , 50/60Hz  
**Power absorption:** 3VA max  
**Display:** 3 digits, red LED, 14,2 mm high; **Inputs:** 2 NTC or PTC probes.  
**Digital input:** free contact  
**Relay outputs:** compressor SPST relay 8(3) A, 250Vac or SPST relay 16(6)A 250Vac  
 defrost: SPDT relay 8(3) A, 250Vac  
 fan: SPST relay 8(3) A, 250Vac  
**Data storing:** on the non-volatile memory (EEPROM).  
**Kind of action:** 1B; **Pollution grade:** normal; **Software class:** A.  
**Operating temperature:** 0÷60 °C; **Storage temperature:** -30÷85 °C.  
**Relative humidity:** 20÷85% (no condensing)  
**Measuring and regulation range:** NTC probe: -40÷110°C (-40÷230°F);  
 PTC probe: -50÷150°C (-58÷302°F)  
**Resolution:** 0,1 °C or 1°C or 1 °F (selectable).  
**Accuracy (ambient temp. 25°C):**  $\pm 0,7 \text{ °C} \pm 1 \text{ digit}$


14. CONNECTIONS

14.1 XR60C – 12VAC/DV OR 24 VAC/DV

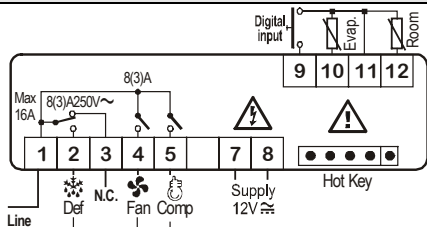


**NOTE:** The compressor relay is 8(3)A or 16(6)A according to the model.  
 24Vac/dc supply: connect to the terminals 7 and 8.

14.2 XR60C – 120VAC OR 230 VAC

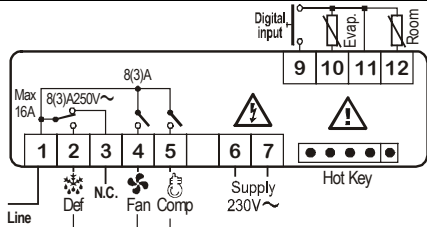


**NOTE:** The compressor relay is 8(3)A or 16(6)A according to the model.  
 120Vac supply: connect to the terminals 6 and 7.

14.3 XR60D: 8A COMPRESSOR

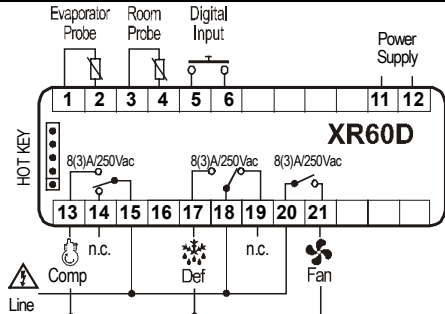

24Vac/dc supply: connect to the terminals 11 and 12.  
 120Vac supply: connect to the terminals 11 and 12.  
 230Vac supply: connect to the terminals 11 and 12.

14.4 XR60D: 20A COMPRESSOR

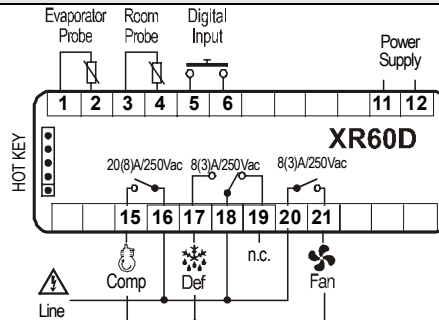

24Vac/dc supply: connect to the terminals 11 and 12.  
 120Vac supply: connect to the terminals 11 and 12.  
 230Vac supply: connect to the terminals 11 and 12.

15. DEFAULT SETTING VALUES

| Label | Name  | Range   | °C/°F   |
|-------|---|---|---------|
| Set   | Set point   | LS+US   | -5/0    |
| Hy    | Differential  | 0,1÷25,5°C/ 1÷ 255°F  | 2/4     |
| LS    | Minimum set point   | -50°C÷SET/-58°F÷SET   | -50/-58 |
| US    | Maximum set point   | SET÷110°C/ SET ÷ 230°F  | 110/230 |
| Ot    | Thermostat probe calibration                              | -12÷12°C /-120÷120°F  | 0       |
| P2P   | Evaporator probe presence                                 | n=not present; Y=pres.  | y       |
| OE    | Evaporator probe calibration                              | -12÷12°C /-120÷120°F  | 0       |
| OdS   | Outputs delay at start up                                 | 0÷255 min   | 0       |
| AC    | Anti-short cycle delay                                    | 0 ÷ 50 min  | 1       |
| CCt   | Continuous cycle duration                                 | 0.0÷24.0h   | 0.0     |
| COOn  | Compressor ON time with faulty probe                      | 0 ÷ 255 min   | 15      |
| COF   | Compressor OFF time with faulty probe                     | 0 ÷ 255 min   | 30      |
| CF    | Temperature measurement unit                              | °C ÷ °F   | °C/°F   |
| rES   | Resolution  | in=integer; dE= dec.point   | dE/-    |
| Lod   | Probe displayed   | P1:P2   | P1      |
| tdF   | Defrost type  | EL=el. heater; in= hot gas  | EL      |
| dtE   | Defrost termination temperature                           | -50 ÷ 50 °C   | 8/46    |
| ldF   | Interval between defrost cycles                           | 1 ÷ 120 ore   | 6       |
| MdF   | (Maximum) length for defrost                              | 0 ÷ 255 min   | 30      |
| dSd   | Start defrost delay                                       | 0÷99min   | 0       |
| dFd   | Displaying during defrost                                 | rt, it, SET, DEF  | it      |
| dAd   | MAX display delay after defrost                           | 0 ÷ 255 min   | 30      |
| Fdt   | Draining time   | 0÷120 min   | 0       |
| dPo   | First defrost after startup                               | n=after ldF; y=immed.   | n       |
| dAF   | Defrost delay after fast freezing                         | 0 ÷ 23h e 50'   | 0.0     |
| Fnc   | Fan operating mode  | C-n, o-n, C-y, o-Y  | o-n     |
| Fnd   | Fan delay after defrost                                   | 0÷255min  | 10      |
| Fct   | Differential of temperature for forced activation of fans | 0÷50°C  | 10      |
| FSt   | Fan stop temperature                                      | -50÷50°C/-58÷122°F  | 2/35    |
| ALc   | Temperat. alarms configuration                            | rE= related to set;<br>Ab= absolute   | Ab      |
| ALU   | MAXIMUM temperature alarm                                 | Set÷110,0°C; Set÷230°F  | 110/230 |
| ALL   | Minimum temperature alarm                                 | -50,0°C÷Set/ -58°F÷Set  | -50/-58 |
| ALd   | Temperature alarm delay                                   | 0 ÷ 255 min   | 15      |
| dAO   | Delay of temperature alarm at start up                    | 0 ÷ 23h e 50'   | 1.30    |
| i1P   | Digital input polarity                                    | oP=opening; CL=closing  | CL      |
| i1F   | Digital input configuration                               | EAL=extern. alarm; bAL=lock regulation;<br>PAL=press. switch; dor=door switch;<br>dEF=defrost; LHT=disabled; Htr = heating<br>- cooling | dor     |
| did   | Digital input alarm delay                                 | 0÷255min  | 15      |
| Nps   | Number of activation of pressure switch                   | 0 ÷ 15  | 15      |
| odc   | Compressor and fan status when open door:                 | no = normal; Fan = Fan OFF; CPr = Compr. OFF; F_C = Compr & fan OFF   | F-C     |
| PbC   | Kind of probe   | Ptc; ntc  | ntc/Ptc |
| dP1   | Room probe display  | --  | --      |
| dP2   | Evaporator probe display                                  | --  | --      |
| rEL   | Software release  | --  | 2.7     |
| Ptb   | Map code  | --  | -       |

Hidden parameters



Dixell S.p.A. Z.I. Via dell'Industria, 27  
 32010 Pieve d'Alpago (BL) ITALY  
 tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13  
 E-mail: dixell@dixell.com - http://www.dixell.com